

User manual



Introduction

Before setting up your Chromecast with Google TV, take a moment to check the contents of the box and ensure you have everything needed for a smooth installation.

Box Contents

Inside your box, you will find the following items :



Requirements

To successfully set up your Chromecast, ensure you have the following :



Google account

Necessary to use Chromecast with Google TV.



Google Home app

Available on Google Play or the Apple App Store, this app is required to set up your Chromecast.

Preparation and Initial Setup

After verifying the box contents and gathering all the necessary components, follow these steps to set up your Chromecast with Google TV.

A

Preparing the Remote

Start by setting up your remote for use :

Inserting the batteries:

Insert the two provided AAA batteries into the remote by opening the compartment on the back.




B

Connecting the Chromecast

Next, connect your Chromecast to your TV and a power source.

Connecting to the TV :

Plug the Chromecast into an available HDMI port on your TV.

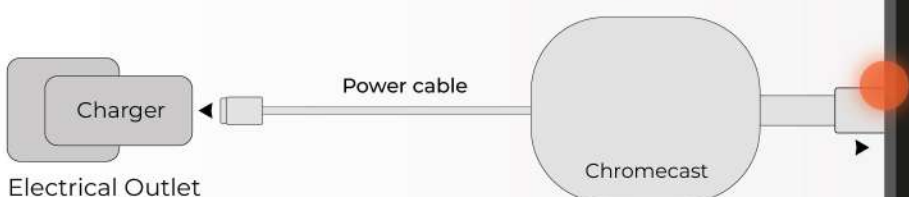

Powering the device :

Connect the power cable to the Chromecast, then plug the power adapter into a wall outlet. Ensure the cable is securely connected and the power supply is stable.



C

Turning on the TV

To continue, turn on your TV and select the correct input:



Selecting the HDMI input

Turn on your TV and use the TV remote to select the HDMI input where your Chromecast is connected. You should see the Chromecast startup screen.

D

Pairing the Remote

If your remote is not yet paired, follow these steps to sync it with your Chromecast:



Start pairing:

If the message "Start pairing" appears on your TV screen, press and hold the Back and Home buttons on your remote simultaneously.

Hold the buttons until a light flashes on the remote. Then, release the buttons once the light appears. The remote will now be connected to Chromecast and ready for further setup.

E

Using the Remote

You will use the navigation and selection buttons to choose options during setup.



Navigation buttons

Next, select your preferred language to continue.



Setting Up Your Chromecast

Now that your Chromecast is connected to the TV and the remote is paired, follow these steps to complete the setup directly on your TV.


Click the **Set up on TV** button on the screen to begin the setup.




Select your **Wi-Fi network** to establish the connection.

Enter the **Wi-Fi password** to connect

Click **Continue** and wait for the system updates to install.

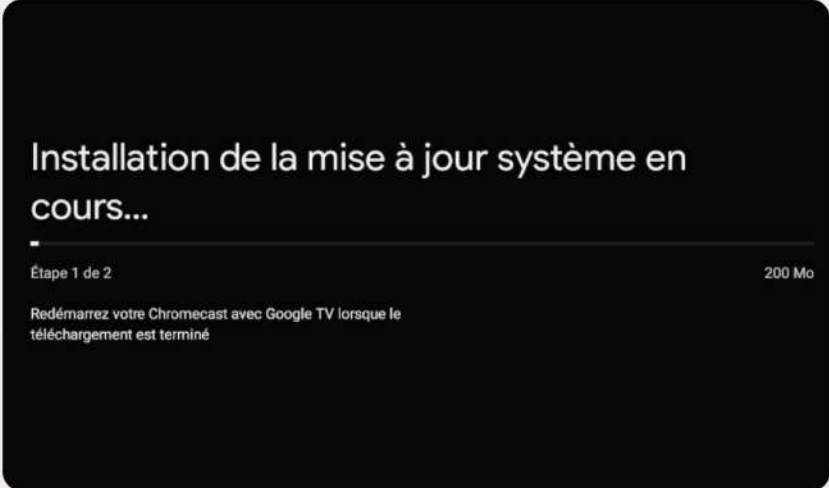



Create a **Google account** if you do not already have one. If you have an account, simply enter your login credentials

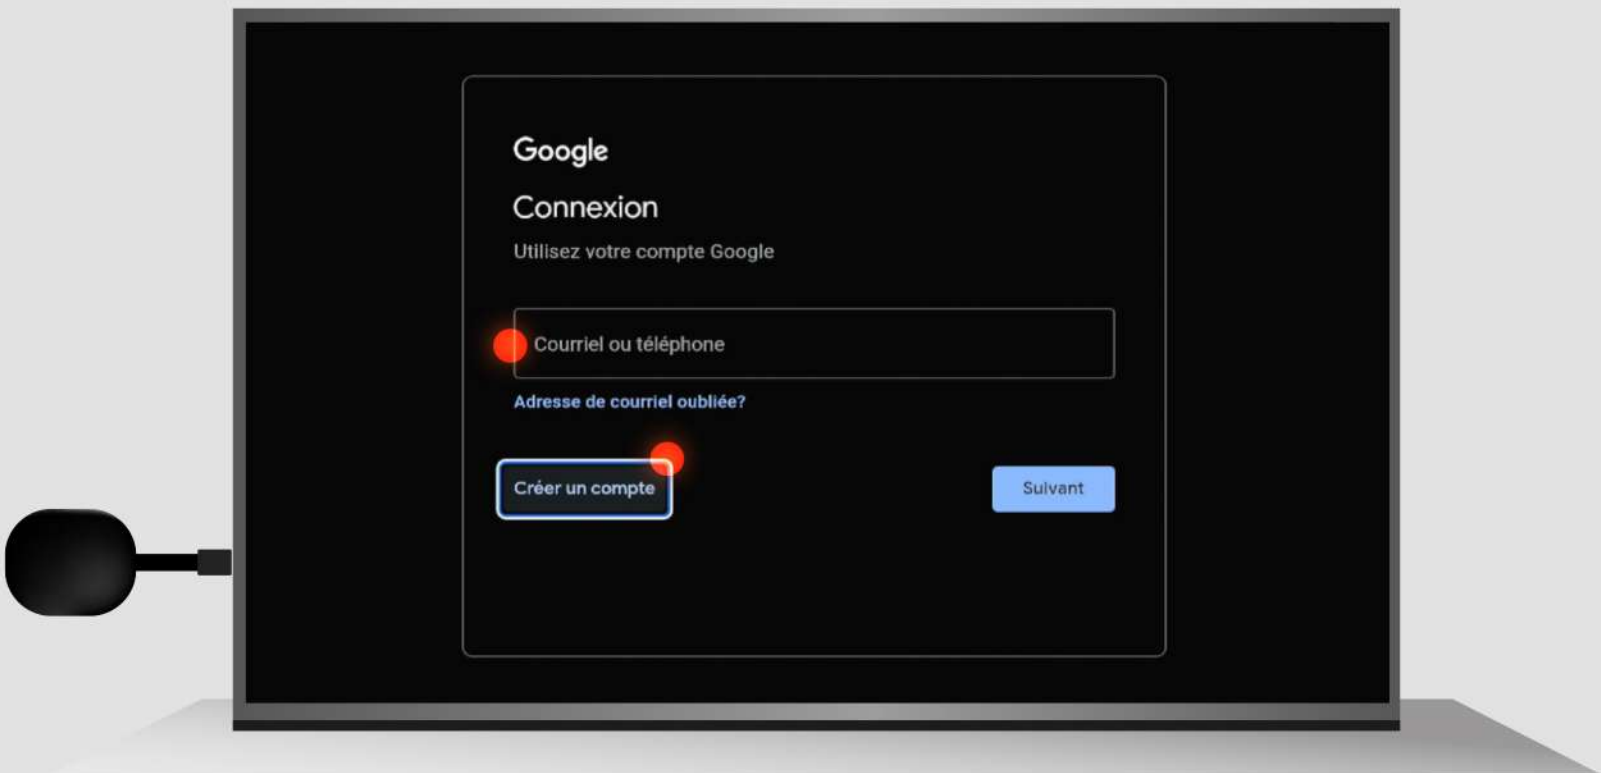

Enter your **first and last name** to create a new Google account

Provide your **date of birth** and select your gender



Choose your **Gmail address** to continue

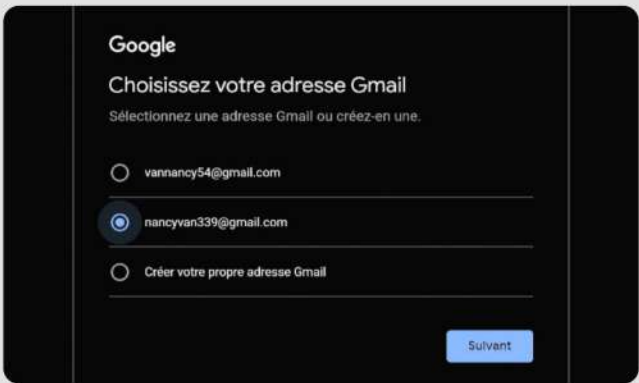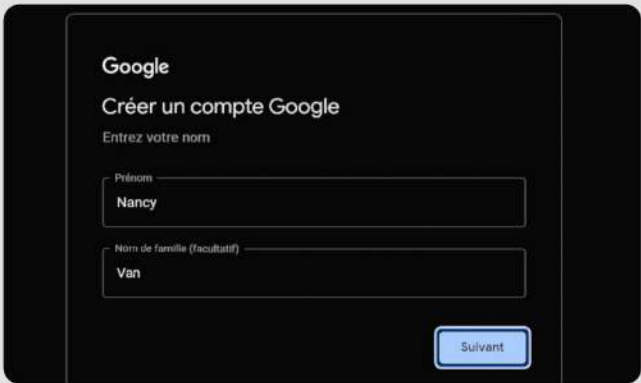

Create a **password** to secure your account.

Click **Skip** if you want to bypass this step.

 
Click **Next** to continue

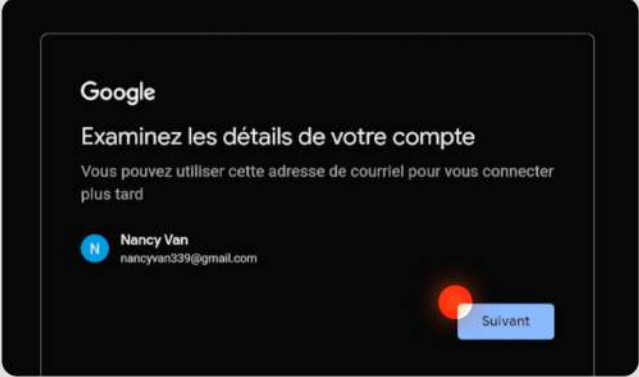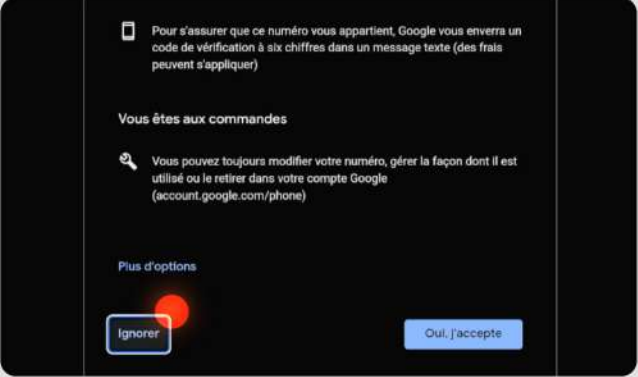

Click **I agree** to accept the terms.

Click **Show more** to see additional information


Click **Accept** to confirm the terms.

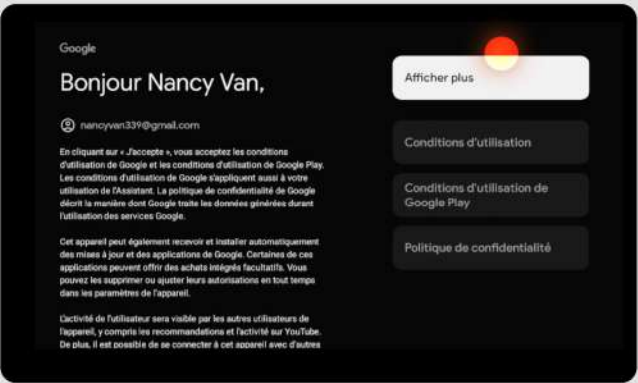

Click **No thanks** if you do not wish to receive notifications.

To use Google Assistant, click **Enable**.


 
Click **Allow** to enable search across all your Google apps.

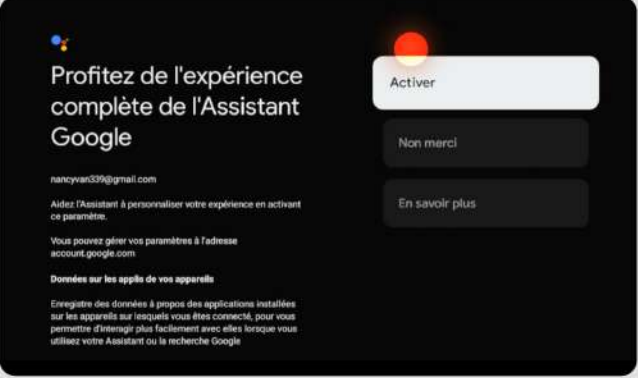

Select the **"Living Room"** option to complete the setup

Confirm your choices to finalize the configuration.

 Click **Not now** to return to this step later.

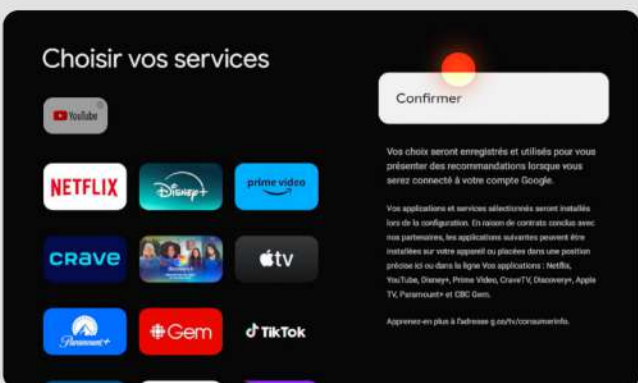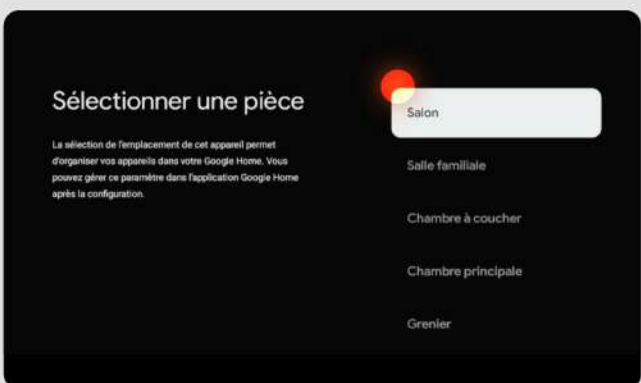


Wait while the setup completes.

Your **Chromecast with Google TV** is now ready. Click **Start Exploring** to begin using it.



Finalizing The Configuration


 
Click **All Settings** in the main menu to access advanced Chromecast settings.

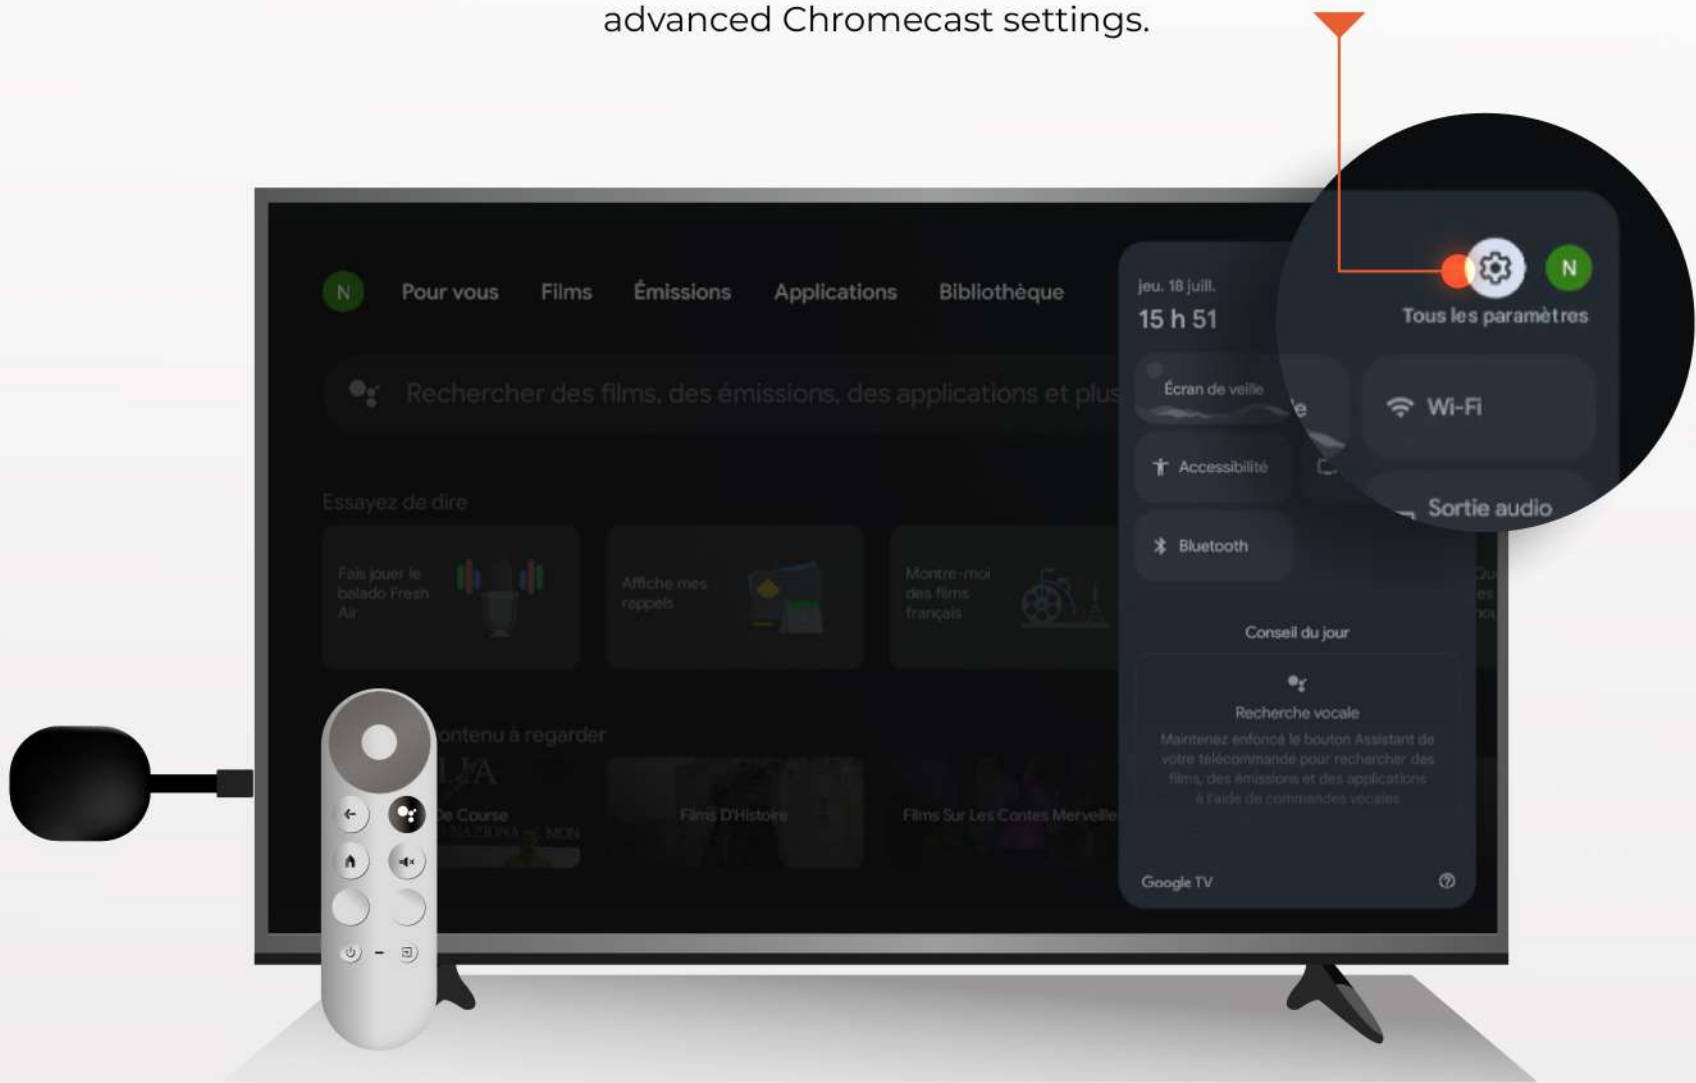

Go to Remote & Accessories to manage your remote and connected accessories.

Select Chromecast Remote from the list of detected remotes to configure your remote.

 
Click Update Remote to ensure your remote has the latest software.

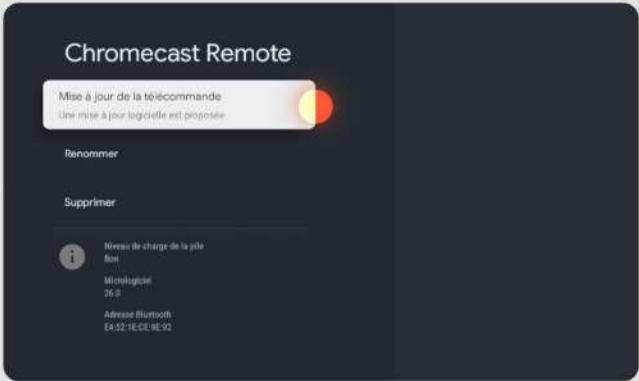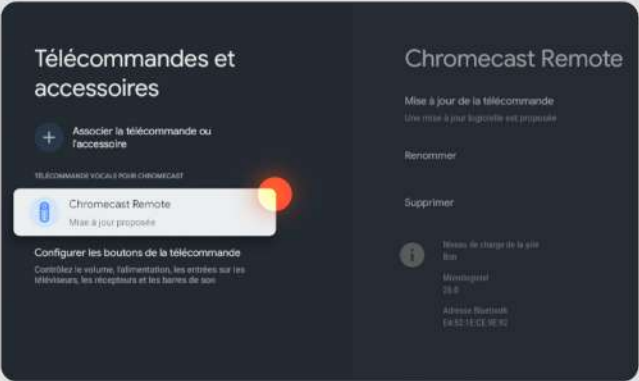

Press Continue to proceed with the update.



Wait for the remote update to finish; this may take a few moments.

Configure the remote buttons by following the on-screen instructions to customize the functions to your preferences.

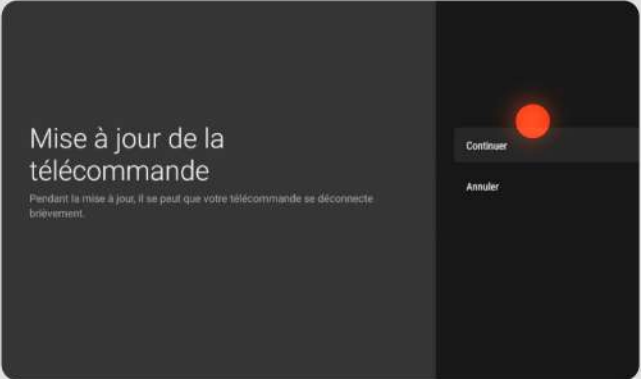

Click Volume Control to adjust your TV volume settings using the remote.

 Select Chromecast to associate the volume control settings with your Chromecast and complete the setup.

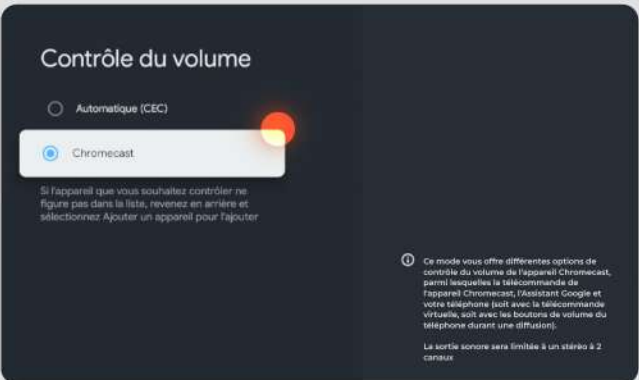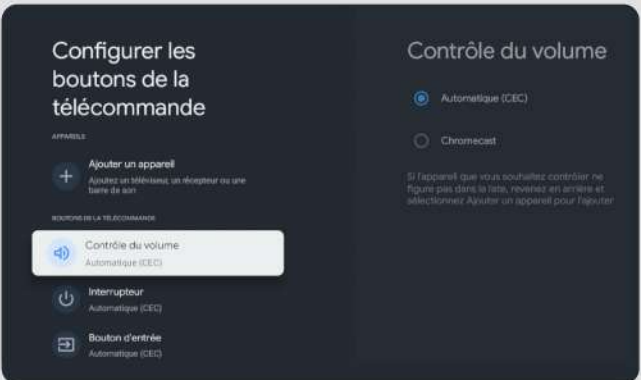

Application

A- Navigate to the app store.



▼ In the search bar, type "Bravo TV" and press Search.



In the search results, select the **Bravo TV** app


Press the **Install** button to download and install the app.

Once the installation is complete, open **the app**.

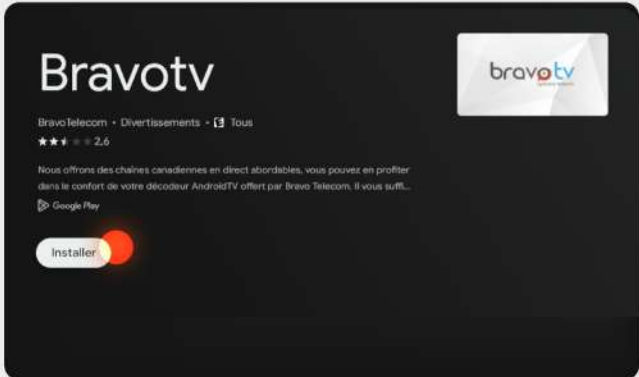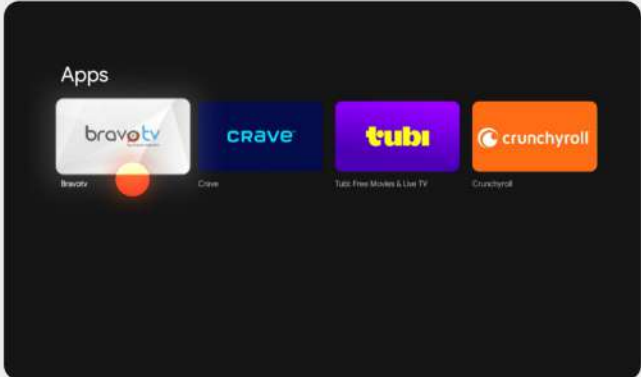


B- Authentication

Click **Sign In** to access your Bravo TV account.

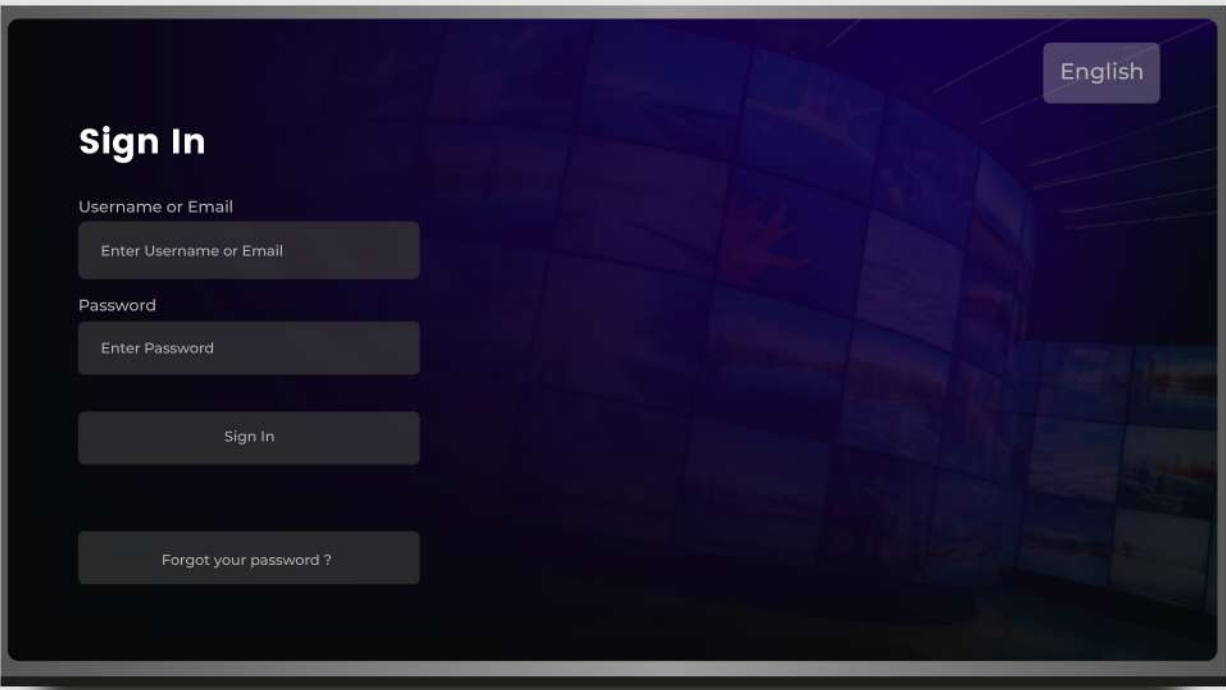

Enter your **username and password**, which were sent to you via email after your service activation.

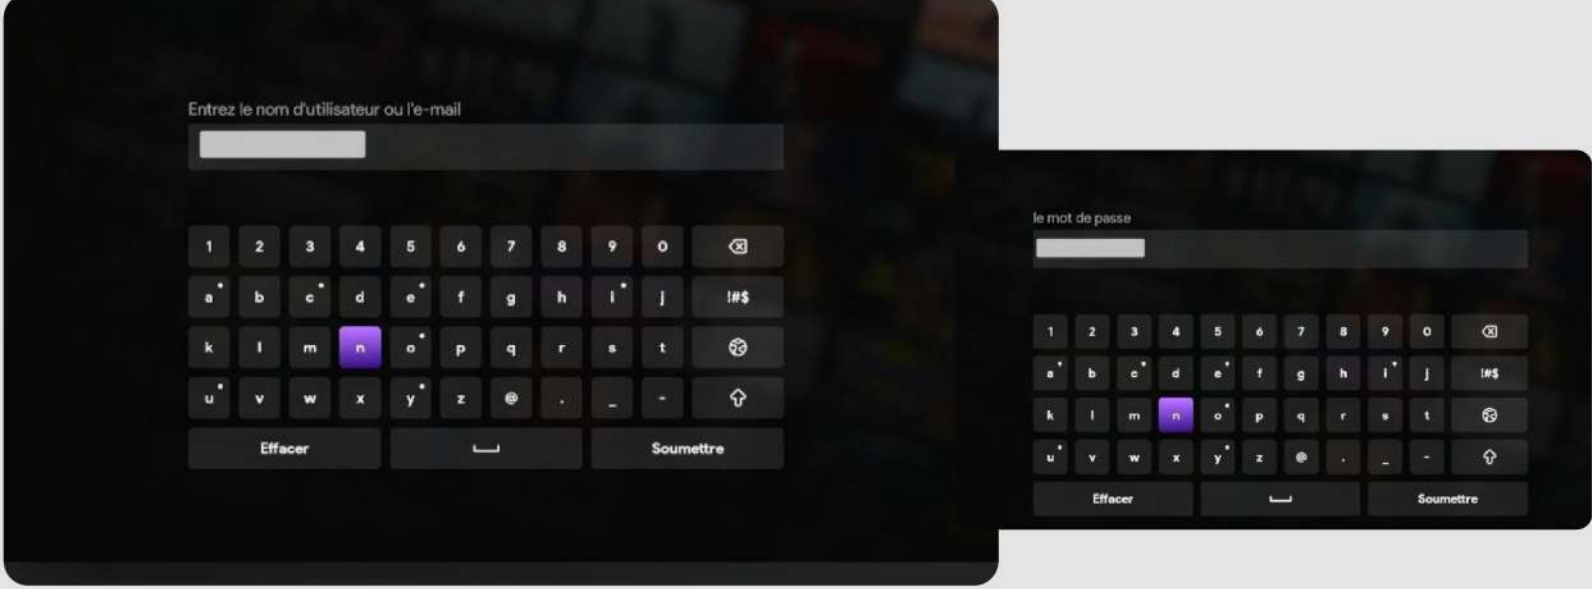

Click **Accept** to agree to the terms and fully enjoy Bravo TV.

C- Your Bravo TV Menu

1 - Live TV



To access all the channels available in your package, navigate to the **"Live TV"** section.


To select a channel, choose the category that interests you and click **"OK"**. Then, use the arrow buttons on your remote to move the cursor and select the desired channel.



2 - Catch-Up TV


Access the **Catch-Up** section to find all content automatically recorded by the smart recorder.

You can browse all available recordings by **channel, date, or program**.

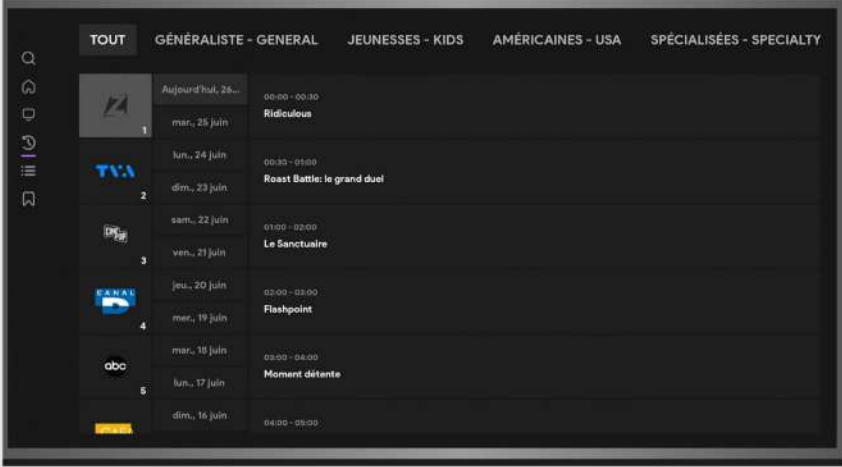

Start by choosing the channel. Then, select the date. Finally, choose the specific program you want to watch. This way, you can enjoy your favorite shows.

Easily navigate through your recordings: in the top-left corner, the currently playing show is displayed (e.g., **12:30 PM - 1:00 PM**).

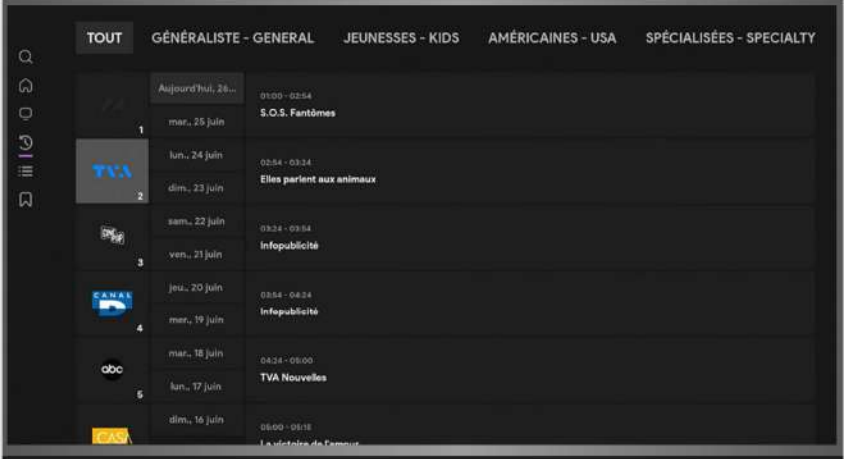


Easily navigate through your recordings: in the top-left corner, the currently playing show is displayed (e.g., **12:30 PM - 1:00 PM**).

To fast-forward or rewind during a catch-up program, press "OK", then move the cursor left or right, as shown in the on-screen guide.



To exit, simply press the Back button on your remote.

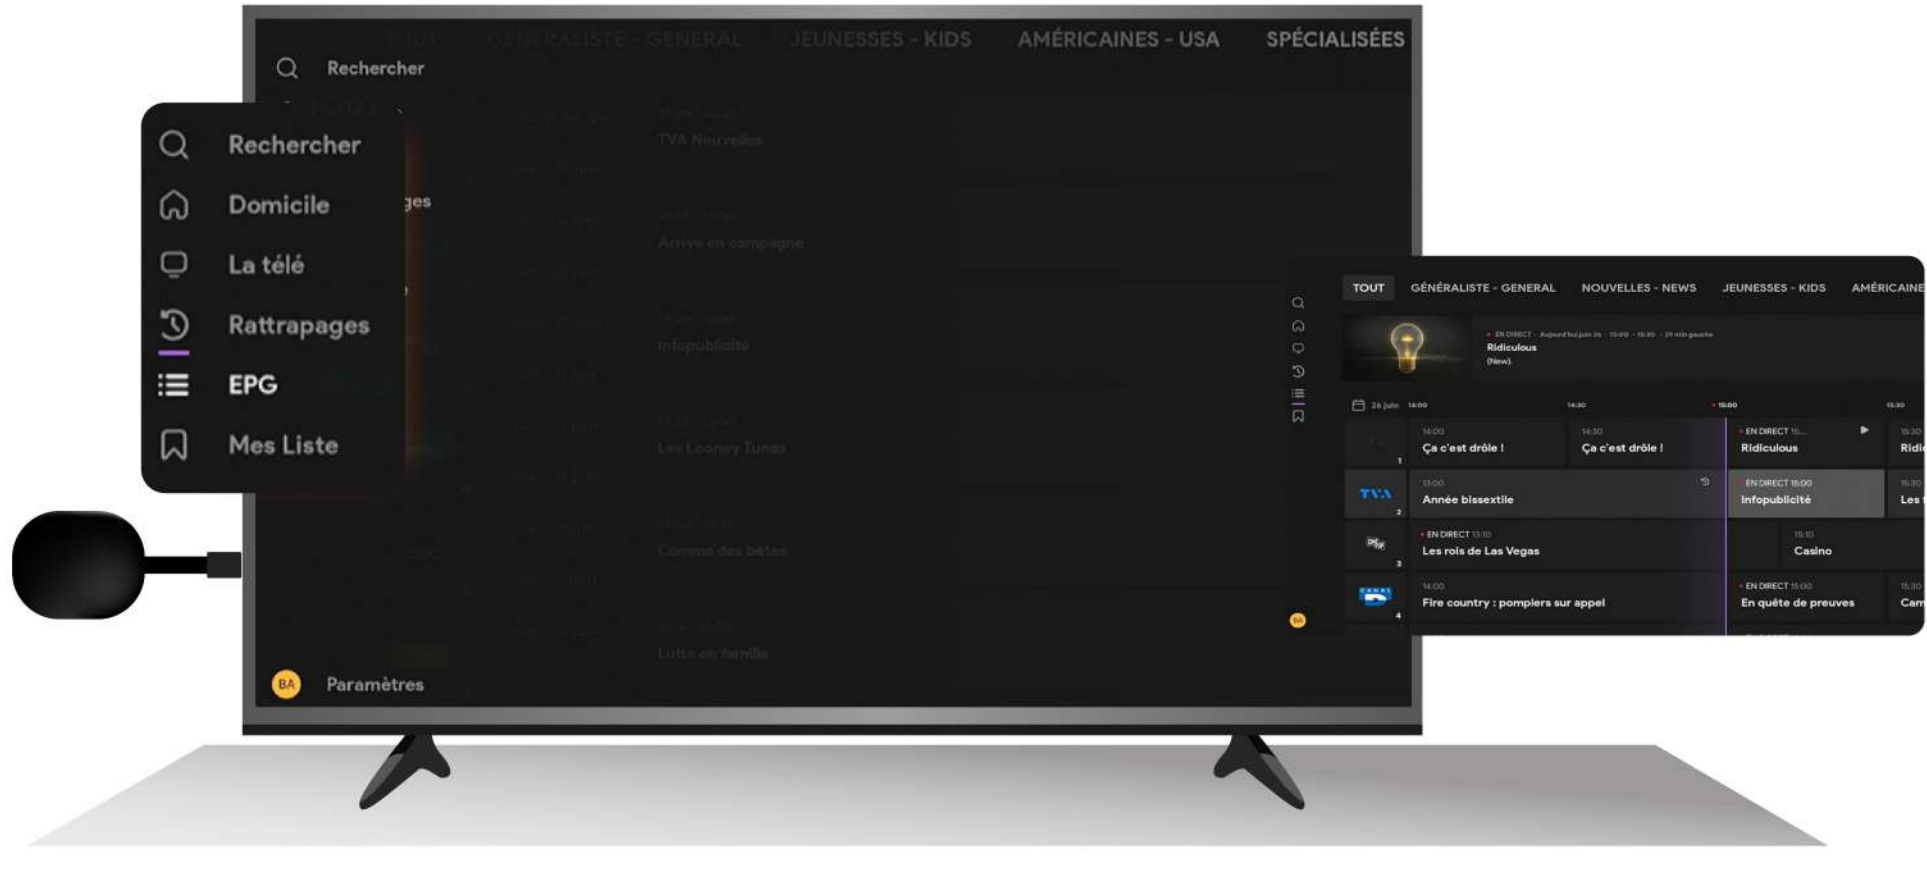


By selecting EPG, you can access the program schedules for all channels.

4- Other Features

★ 4-1 Favorites

While watching a channel, press the **Back** button to add it to your **Favorites** list.


To remove a channel from **Favorites**, click on the **✓** button, and it will be removed.

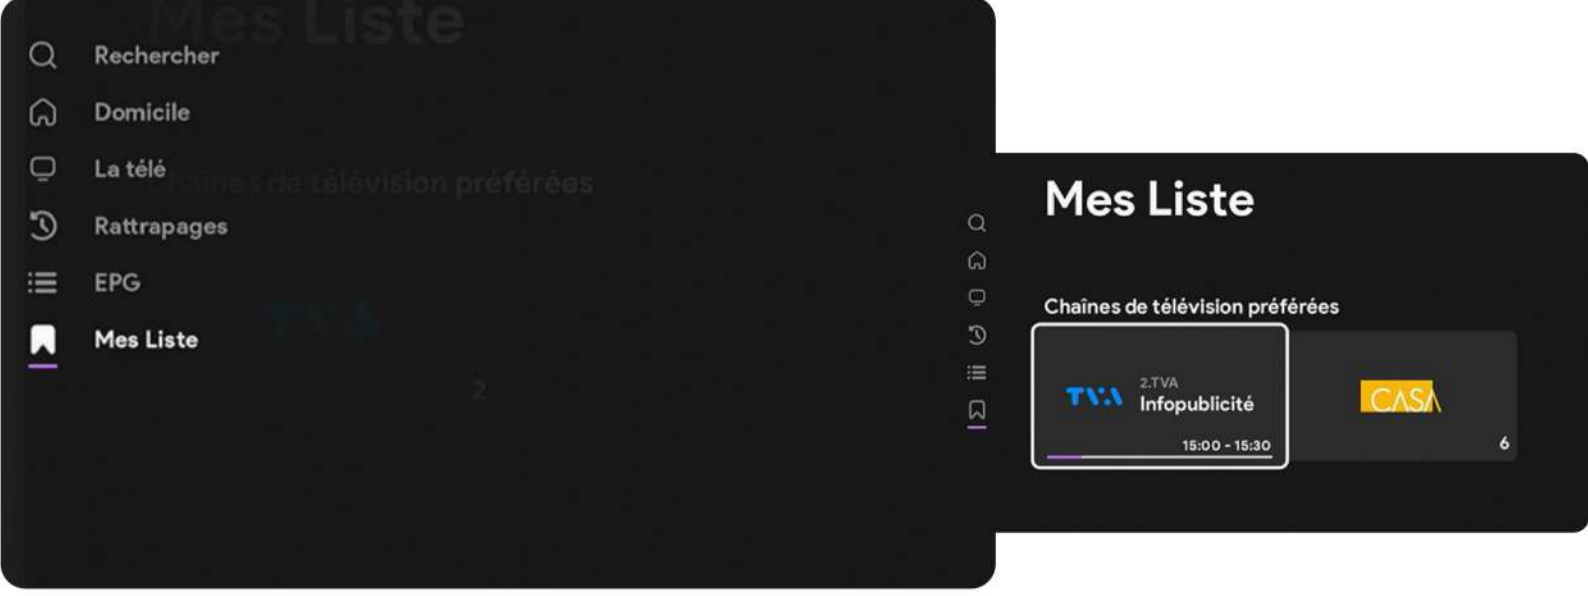

To access your **Favorites**, go to the "My Lists" section.

☁ 4.2 Channel List and Recordings.

Access the **list of channels** by clicking on the dedicated icon.

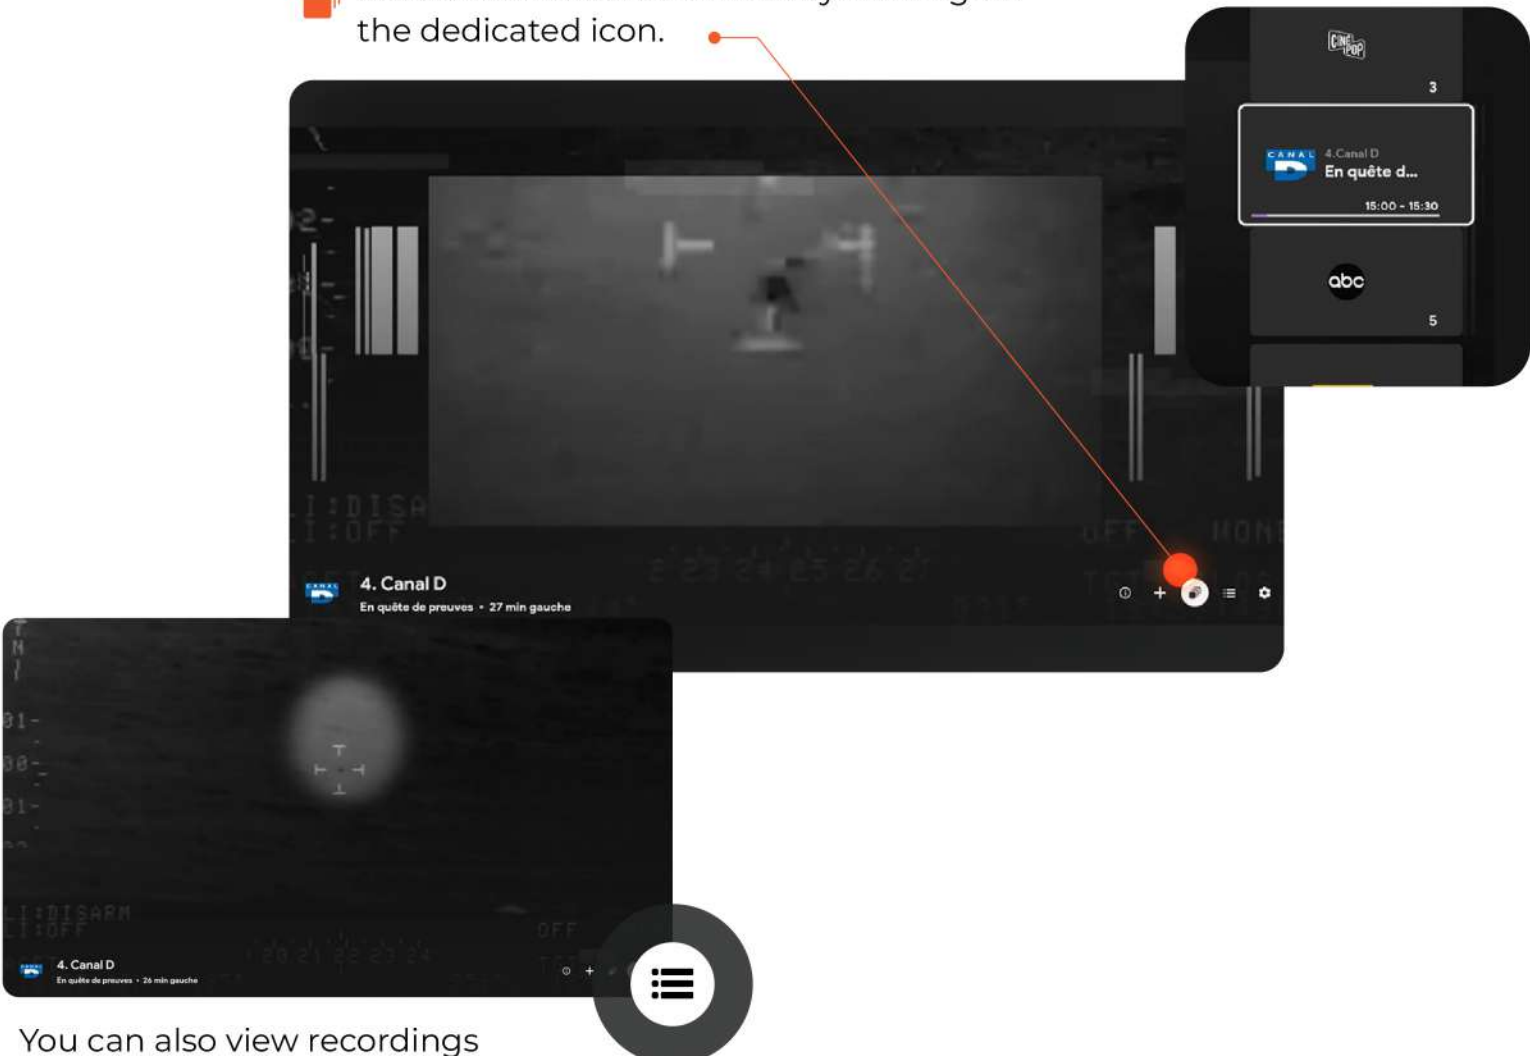


You can also view recordings directly from the open channel.


To start, choose the broadcast date of the show. On the right, you will see all the recorded shows for that date.



Don't forget to select the one you want to watch.

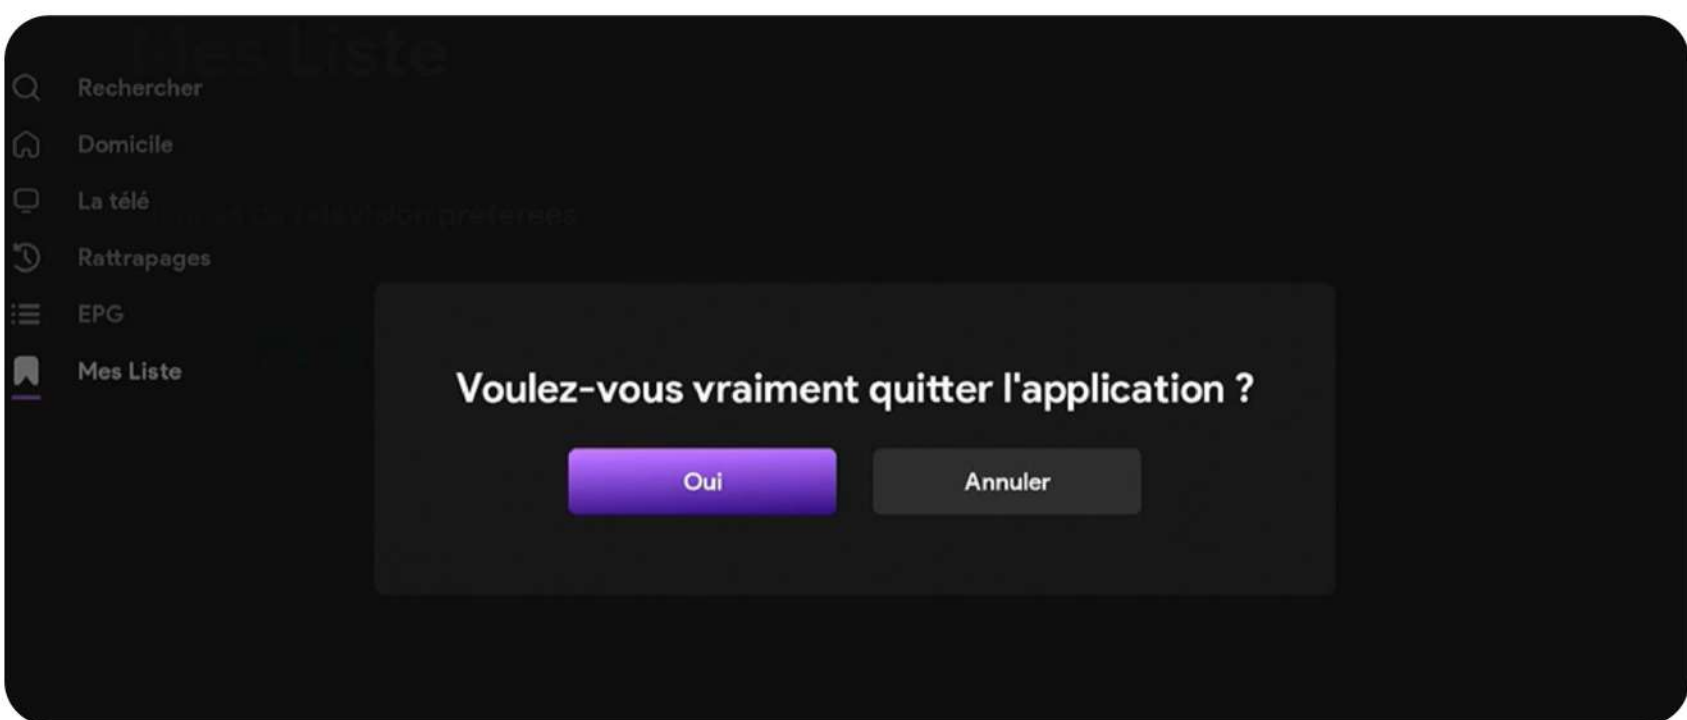


To **close the application**, press the **Back** button until an exit message appears.



Setting Up a PS5 Controller with Chromecast



Turn on the controller : Press and hold the **PS button** and the **Create button** (button with three lines) simultaneously until the light bar starts **flashing rapidly in blue**. This indicates that the controller is in Bluetooth pairing mode.

Go to **All Settings**.

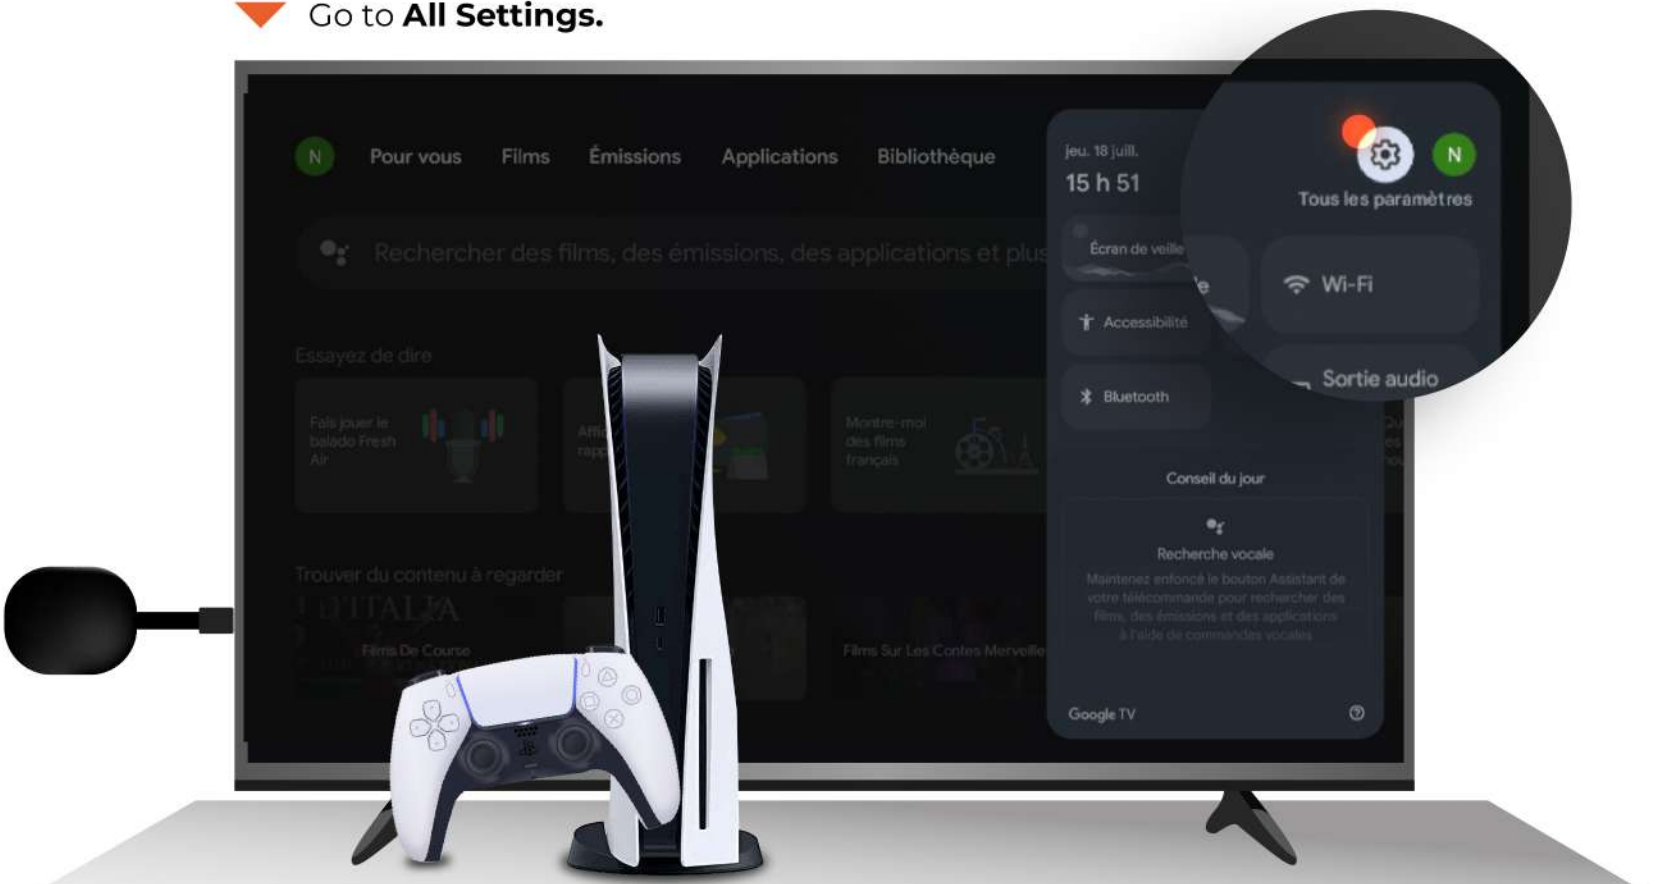


Select **Remote & Accessories**.

Click on **Pair Remote or Accessory**.

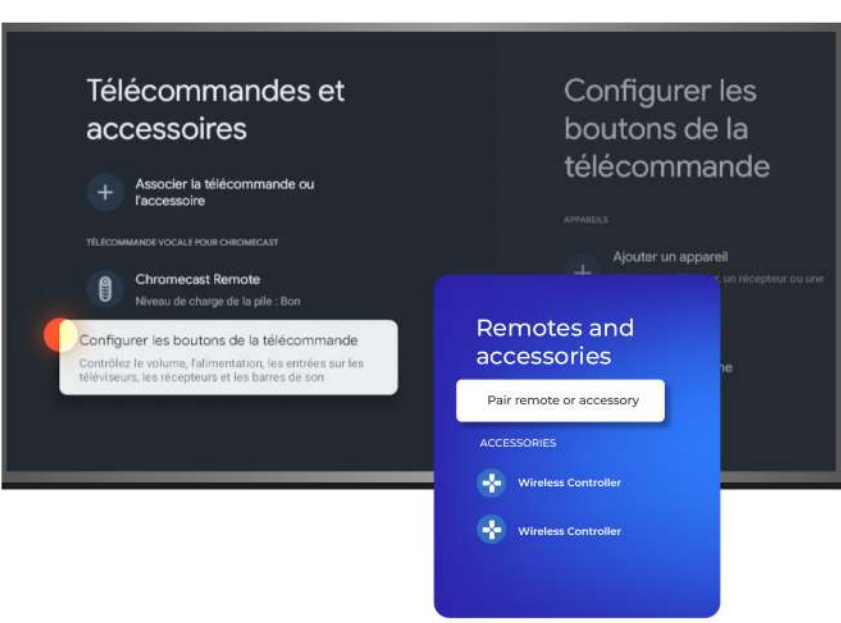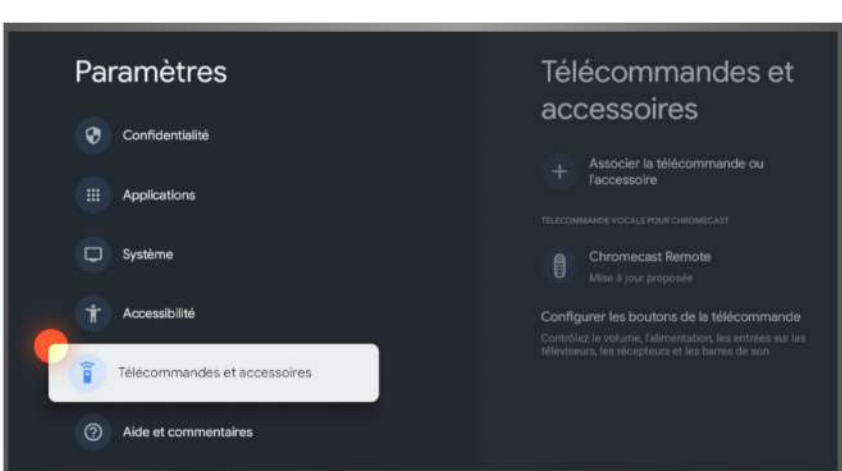

Chromecast will begin searching for available **Bluetooth devices** nearby.

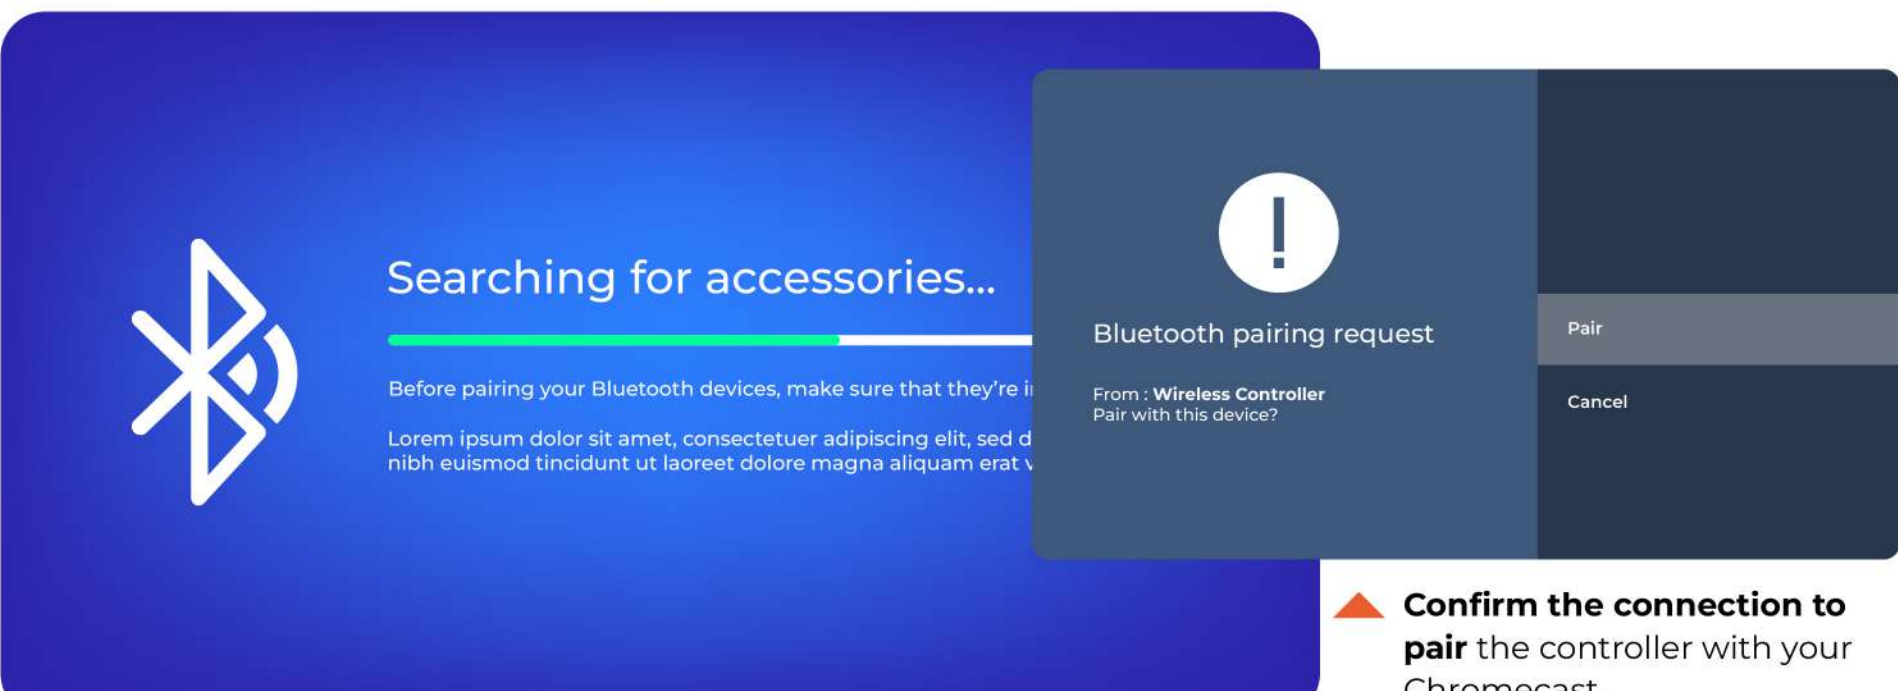

Select the **PS5 Controller** from the list when it appears.



User manual



Back to the support

 **(514) 360-6333**

Bravo Telecom, 6001 Rue Jean Talon Est, St. Leonard, Quebec H1S 1M5