


## Phone setup

### A Telephone


Electrical Outlet

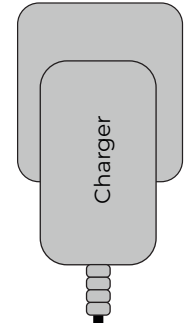


Cable adaptateur

- 1 • Plug the charger into an electrical outlet and connect the other end to the power port of the adapter.

Yeastar telephone adapter

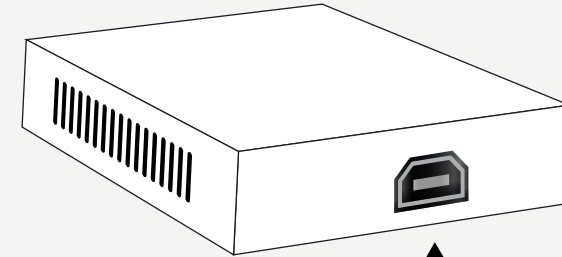

RJ11 cable

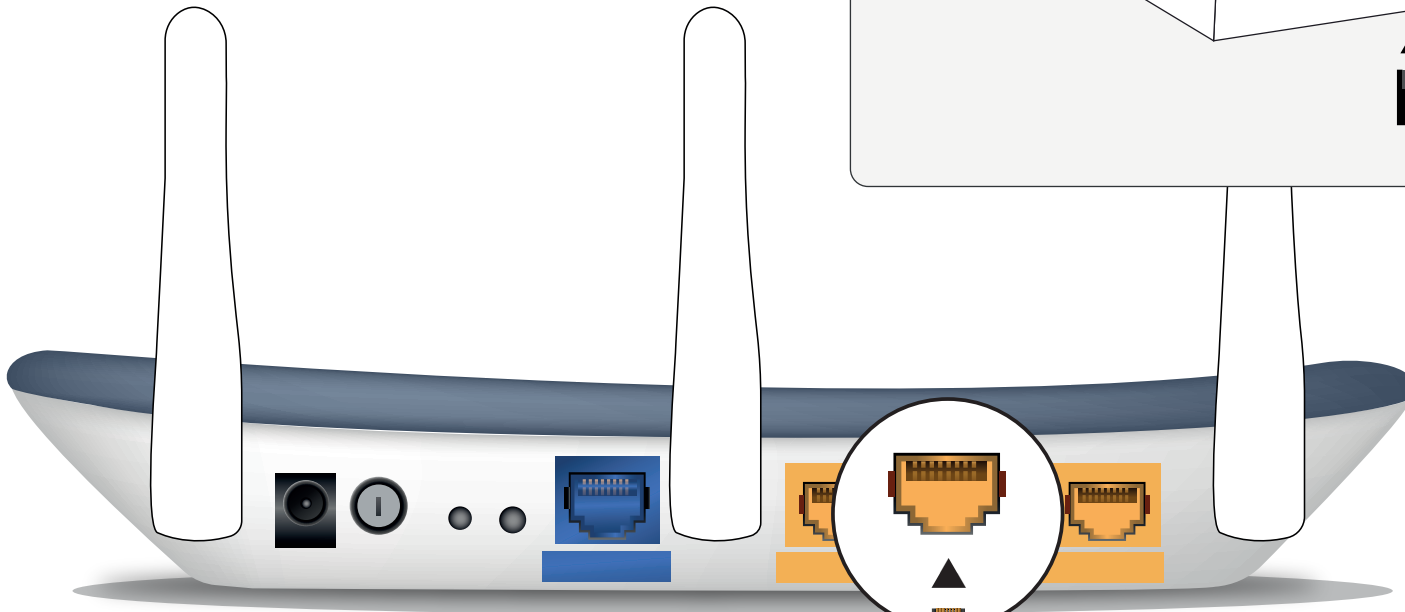

- 2 • Connect an Ethernet cable between the LAN/WAN port of the adapter and your Internet router.

- 3 • Connect your landline phone to the telephone port on the adapter using a standard telephone cable (RJ11 cable).