


Internet Setup

A Modem

Electrical Outlet

- 1 Plug the charger into the modem's power port and into the electrical outlet.

- 2 Connect the coaxial cable to the modem and ensure it is securely clipped in.

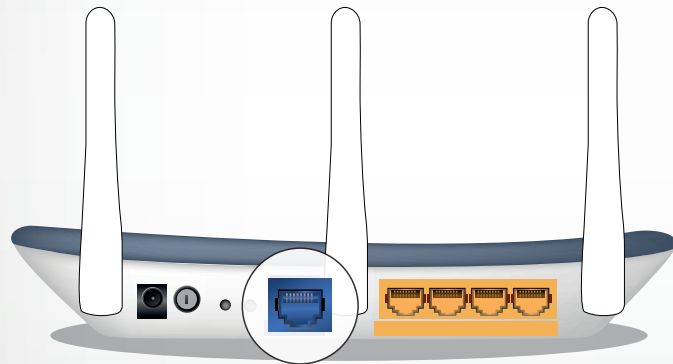


- 3 Connect the Ethernet cable first to your modem and then to the blue (Internet) port on the router.

B Routers

TP Link C20 AC750 et TP Link Archer C1200

Electrical Outlet

- 1 Plug the charger into the router's power port and into the electrical outlet.

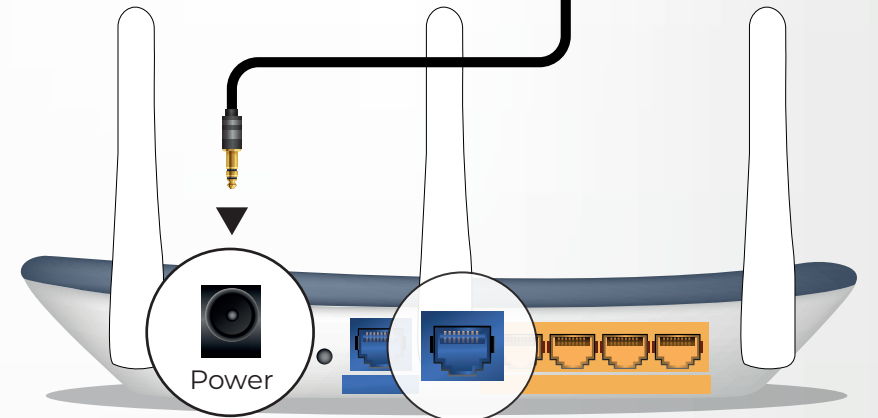

- 2 Connect the other end of the Ethernet cable from the modem to the router's blue Internet port.

- 3 If you want to connect a device to your router via an Ethernet cable, plug it into one of the yellow ports.

